

## NSEA GUIDE TO BAOFENGTECH GMRS-X01 TWO-WAY RADIO PROGRAM SETTINGS

Loc	Code	Name	Settings	My Dflt	Notes
0	TMR	TX Multi RX WATCH	OFF   M+A+B+C, etc.	M+A+B+C	M=Current selected channel A-D Display Lines; See Mem 54, 62
1	STEP	VFO Freq. Step Size	2.5, 5, 6.25, 10, 12.5, 25 Hz	10.00K	2.5 to 25 kHz
2	SQL	Squelch Level	0 > 9	1	0 = Open Squelch
3	TXP	Transmit Power	High   Mid   Low	HIGH	H=50 watts; M=20w, L=5w
4	AUTOLK	Auto Keypad Lock	ON   OFF	OFF	Enabled or Disabled
5	TOT	TX Time Out Timer	15 > 600 seconds	60	In 15 second steps
6	APO	Auto Power Off	OFF   30 – 300 mins	OFF	After last signal received
7	WN	Channel Bandwidth	WIDE   NARROW	Varies	12.5 kHz (interstitials)   25.0 kHz (main)
8	ABR	Automatic Brightness Reduction	OFF   1 > 50	OFF	Amt time display backlight dim out after RX or TX "Unused" per Baofeng
9	BEEP	Keypad	ON   OFF	ON	Keypad "Voice Prompt"?
10	R-DCS	RX Digital Squelch Code	OFF   D023N > D754I	OFF	Digital squelch code value
11	R-CTCS	RX Traditional sub audible tone	OFF   67.0 > 254.1 Hz	OFF	CTCSS Tone Code necessary to open receiver
12	T-DCS	Transmit DCS Code	OFF   D023N > D754I	OFF	
13	T-CTCS	Transmit Traditional SubAudible Code	OFF   67.0 > 254.1 Hz	Varies	
14	DTMFST	When DTMF heard thru speaker	OFF   KEY   ID   BOTH	BOTH (All)	KEY=Manually pushed ID=Only automatically (SelCall)
15	BCL	Busy Channel Lockout	ON   OFF	OFF	Locks transmitter off while signal rcvd
16	SC-ADD	Add/Delete Scan Ch.	ON   OFF		For currently selected channel
17	SC-REV	Scan Resume Method	TO   CO   SE	CO	TO=Factory set 5 secs. CO=Carrier + 3 secs SE=Manual resume */Scan
18	OPTSIG	Optional Signaling	OFF   DTMF   2TONE   5TONE	OFF	SelCall method; Press Call Button
19	SPMUTE	Speaker Mute	QT   AND	QT	QT=Squelch code only AND=Also req adnl Sel Call
20	PTT-ID	When PTT-ID sent	OFF   BOT   EOT   BOTH	OFF	Beginning, end, or both
21	PTT-LT	PTT Transmit Delay	0 > 30 seconds	1	Before PTT-ID sends
22	S-INFO	SelCall Auto Group Dialing	Group Signal Code Memory Line 1 > 15	1	<b>Can only be set with software</b>
23	EMP-TP	Alarm Action	OFF   ALARM   ANI   BOTH	OFF	ALARM=Sound ANI=Send Alarm & ID Code
24	EMC-CH	Alarm Channel	000 > 255	CH-000	Channel to use for Alarm
25	SIG-BP	Opt Signl Beep Action	ON   OFF	ON	Sound Beep when SelCall received
26	CHNAME	Edit Channel Name			For selected channel in Display
27	CA-MDF	Ch. A Display Text	FREQ   CH   NAME	NAME	Info in Line A Display
28	CB-MDF	Ch. B Display Text	FREQ   CH   NAME	NAME	Info in Line B Display
29	CC-MDF	Ch. C Display Text	FREQ   CH   NAME	NAME	Info in Line C Display
30	CD-MDF	Ch. D Display Text	FREQ   CH   NAME	NAME	Info in Line D Display
31	LANGUA	Language	English   Chinese	ENG	For Screen Prompts Display
32	SYNC	Syncing of Display Lines A through D	OFF   AB   CD   AB+CD	OFF	Allows upper display to show ch. name while lower shows freq. Can sync top 2, bottom 2, or both simultaneously
33	ST-FC	Color of Status Icons Line in Display	WHITE   RED   BLUE   GREEN   YELLOW   INDIGO   PURPLE   GRAY	GREEN	
34	MF-FC	Color of Primary Selected Channel in Display	SAME	WHITE	
35	SFA-FC	Color of Display Ch. A	SAME	YELLOW	
36	SFB-FC	Color of Display Ch. B	SAME	GREEN	
37	SFC-FC	Color of Display Ch. C	SAME	INDIGO	
38	SFD-FC	Color of Display Ch. D	SAME	RED	

Loc	Code	Name	Settings	My Dflt	Notes
39	SUB-FC	Color of Disp DeC(ode)	SAME	WHITE	
40	FM-FC	Color of Voltage Text	SAME	YELLOW	
41	SIG-FC	Color of Status (Bottom Line of Display)	SAME	INDIGO	
42	MOD-FC	Color of Main Freq. Mode//Ch. No. Info	SAME	WHITE	
43	MENUFC	Color of Menu Text	SAME	WHITE	
44	TX-FC	Color of TX Ch. when TX	SAME	YELLOW	
45	TXDISP	Info to display when TX	POWER   MIC-V	POWER	What shows on top line while TX
46	MEM-CH	Channel for Mem VFO	000 > 255	CH-000	Channel number for memorizing ch.
47	DEL-CH	Mem. Ch. for Delete	000 > 255	CH-000	Channel number for deleting ch.
48	SFT-D	Freq Shift Direction	OFF   +   -	OFF	<b>Unused - Fixed by FCC</b>
49	OFFSET	Freq. Shift Offset Amt	///.///	///.///	<b>Unused - Fixed by FCC</b>
50	ANI	ANI ID Code	<b>Must set with software</b>	-	
51	ANI-L	ANI Length	3   4   5	5	
52	REP-S	Repeater Activation Ton	1000HZ   1459HZ   1750HZ   2100HZ	1750HZ	Tone-burst: PTT + Call Button
53	REP-M	Repeater Forwarding Mode (X-Band Repeater with 2BTECH Mobiles)	OFF   CARRI   CTDS   TONE   DTMF	OFF	<b>Unused (for Amateur)</b>
54	TMR-MR	TMR WATCH Return Time Delay	OFF   1 > 50 seconds	10	Delay after Dual/Tri/Quad WATCH until Selected Main Channel restored (including TX). See Mem 0, 62
55	STE	Squelch Tail Elimination	OFF   ON	OFF	For ON, both (all) radios must be set
56	RP-STE	Repeater Squelch Tail Elimination	OFF   1 > 10 seconds	OFF	For on - repeater must have compatible setting
57	RPT-DL	Repeater Squelch Tail Delay	OFF   1 > 10 seconds	OFF	For time repeater TX stays up after input signal ceases ("Drop out delay")
58	DTMF-G	TouchTone Audio Gain	0 > 60	15	Use test gear to set to ideal deviation (800 Hz)
59	MIC-G	Microphone Gain	0 > 127	1	Use test gear to set for clearest audio ±5/2.5kHz deviation with no clipping.
60	SKIPTX	Quad freq. operation; Randomize TX ch. w/corresponding mobile same 4 ch. – trans. spread on 4 ch. In 2 modes.	OFF   SKIP1   SKIP2	OFF	SKIP1=Randomizes in bet. after both TX & RX – Req. both rx & tx before going to another random freq. SKIP2=Alternates tx on A,B,C,D; each PTT tx next ch. in order of display (A-B-C-D-Repeat)
61	SC-MOD	Automatic Scan Resume Method	OFF   PTT-SC   MEM-SC   PON-SC	OFF	OFF=Disabled on reboot/pressing menu key/PTT PTT-SC=Resume after TX/other menu operations MEM-SC=Remember on reboot, if active resume on pwr down->restart/after TX/other menu operations PON-SC=Start upon pwr on/after TX/after menu operations Otherwise press */Scan key on mic
62	TMR-TX	XMTR behavior w/TMR Dual/Tri/Quad WATCH	FIXED   TRACK	FIXED	FIXED=TX on Main Channel TRACK=TX on RX Ch. See Mem 0, 54
63	RESET	Initial to Factory Defaults	VFO   ALL	ALL	VFO=Menu ALL=Menu & Channels "Source"

Green = Global setting      Orange = Global for Display Info/Colors      Otherwise setting can vary by channel.

Notes: